PC2306



Sunshine Flower House

PC 2306 Instruction Manual

NOTICE OF ASSEMBLE

Tips for assembling

1.Because this product contains small parts, children need to use this product with an adult to avoid accidental ingestion and cause suffocation hazard. There are sharp objects in the product, be careful not to pierce people to avoid injury.
2.After all the materials are used in the required amount in the operation steps, put the remaining materials back into the original bag until the installation is completed. (Avoid losing materials during the installation process)
3.The unit of dimension marked in the step diagram is "cm".
4.Tips for making template paper: Put the template on the back of the material, fix it with some small double-sided tape, and then cut out the material to prevent the cloth or template from moving in the cutting process, or causing errors in the cut material. Or lead to insufficient materials.
5.According to the "Parts Rule Example" at the bottom of this page, refer to the parts on the part number drawing, find the actual product and compare it with the bill of materials, and then install it after confirming that it is correct. (Wooden parts only)
6.It is not advisable to apply too much glue, so as not to wait for a longer time to dry, and overflow will affect the effect of the finished product.
7.There are unavoidable small deviations in the color of wood, fabric, and beads of different batches, without notice, thanks for understanding.

Tips for Assembling Wood



Find the corresponding block number, use a knife in the connection point gently press, you can take out the wood.



Use a knife to smooth out the burr.




Or use sandpaper to smooth out the burr

Testing on LED function


Be sure to test the LED lights before making the lighting,note that the LED white wire to the negative, gray wire to the positive reference to the following figure operation test.

1

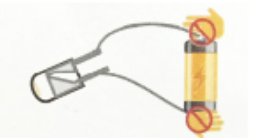

DO NOT contact the LED wire end direct to the battery cell.

2

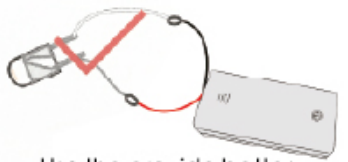

Use the provide battery holder. Make sue the correct polarity.

How to assemble the battery holder




1.Material and tools needed:
- Battery holder, LED bulb, tape, screw driver and 2 pieces AAA size battery(not provided)



2. Use screw driver and take the lid off from the battery holder.



3. Insert the battery take notes on the polarity.

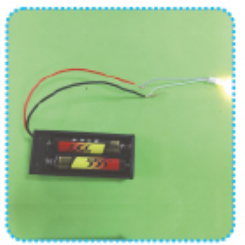

4. Connect the red wire to grey wire. Connect the black wire to white wire.



5.Wrap the exposed wire with the tapes.



6. Place the box lid and fastness with screw driver.


Examples of parts rule:

A01:The parts are directly in the box: B01: The parts are in the B bag; C01: The parts are in the C bag, and so on (Note: The printing paper is displayed in the step A07-1: The printing paper is placed directly in the box , The part number is A07-1. In the step, the template paper A09-F01 is displayed, A09 is the template paper, F01 is the cutting template used for the corresponding material, F01-1, F01-2 are the part numbers for the parts, and the printing paper and template paper are directly placed in the packaging box.)

Contents


Name	Materials Package	
Printing paper	A bag A07,A09(all printing paper are set in A07,all templare paper are set in A09;total 4pieces of A4 paper)	
Flower rack 1	A bag +Cbag +E bag +Fbag +printing paper	page 3-4
Flower rack 2	A bag +Cbag +E bag +Fbag +printing paper	page 4-7
Flower rack 3	A bag +Cbag +E bag +Fbag +printing paper	page 8-9
Plant	A bag +E bag +Fbag	page 9
Table	Cbag +D bag+printing paper	page 10
Component	A bag +Dbag +Fbag +printing paper	page 10-11
Plants and Flowers 1	A bag +Bbag +E bag +Fbag +printing paper	page 12-13
Planter	A bag +Bbag +E bag +Fbag +printing paper	page 13
Plants and Flowers 2	A bag +E bag +Fbag +printing paper	page 14-15
Broom	Dbag +Fbag	page 15
Assembly The Frame	A bag +Bbag +Dbag +Fbag +printing paper	page 16-22
Installation Of Battery Box	G bag	page 22


Thumbnail of material list (reference only)

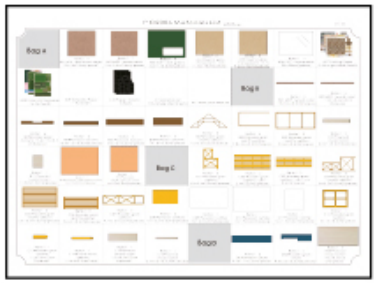





Thumbnail of printing paper & template paper (reference only)

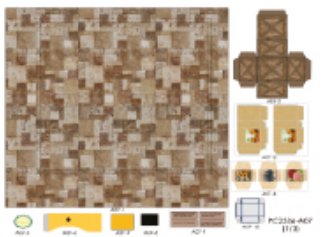

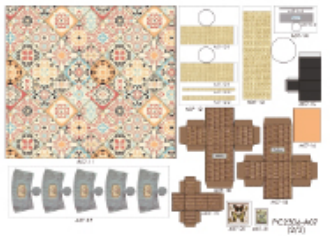

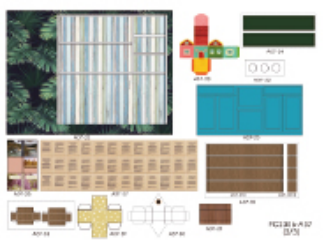

Symbol description used

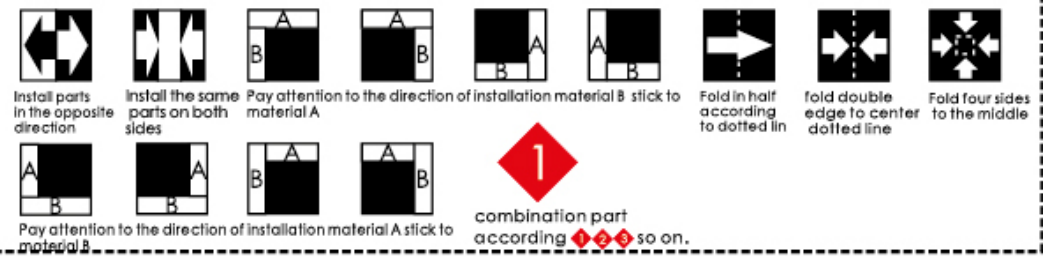

About the use of glue

Method for using glue:
1. After applying the glue, let it dry for a few seconds before pasting.
2. Fix it slightly with your hands, and finally put it aside to dry;

Tips:

1.When pasting the plane printing paper, a piece of waste bank card or telephone card can be used to wipe evenly after the glue is smeared on the wood board, and then the printing paper is pasted to squeeze out the air inside.


2 .In the process of making glue, you need to wait for the glue to dry,The next component can be assembled at the same time;

Types of glue:


White latex: Used for adhering soft materials, such as wood and paper.

Alcoholic Glue: Used for adhering hard materials such as cloth, plastic, beads, wire, dust cover, etc.

Flower rack 1

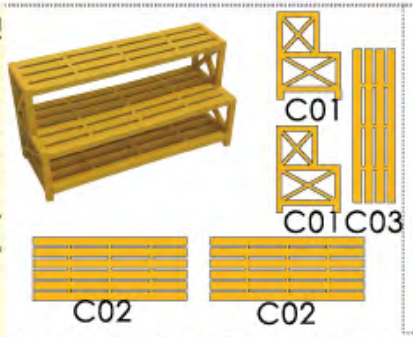

1

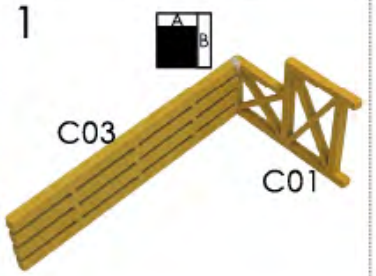

2



3




4



Please remove A08-36, A08-37, A08-39, A08-41, A08-44, and A08-32 for use before production



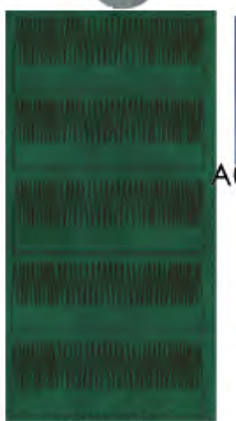












F01 (3cm)
23 required



1

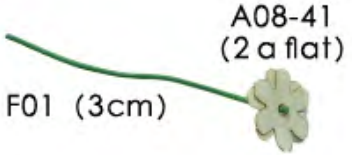

2



3



The same production method completes other flowers

4



5



Place the bouquet at one end of A08-32 and start rolling up

6



7



8



5 pieces need to be made

9



10



Complete flowers A08-36, A08-37, A08-38,A08-39, A08-44 using the same production method


Please remove A08-23 for use before production






E06

F01 (17.5cm)

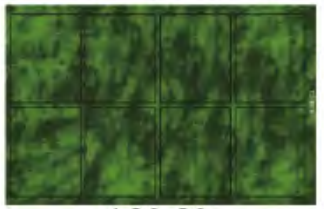


A08-23

1

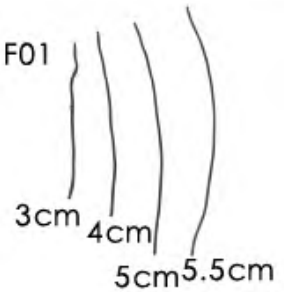

2

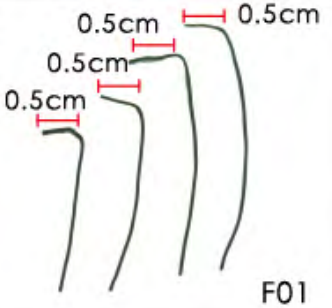

3



A08-23

4



Organ fold

5



Fold in half
(8 pieces need to be made)

6



Mutual bonding

7




Same production completed Other

8




E06



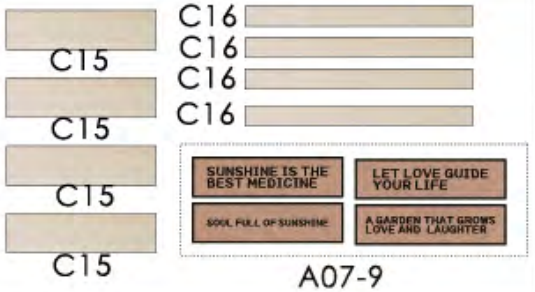


A07-9

1

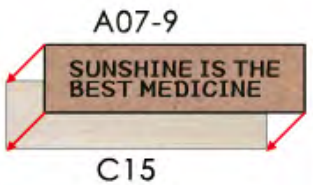

2

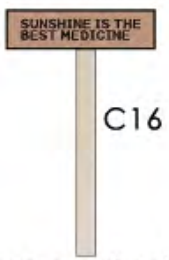


Same production completed Other

3




Flower rack 2



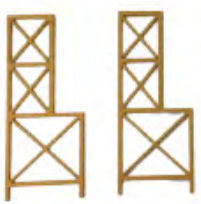




1

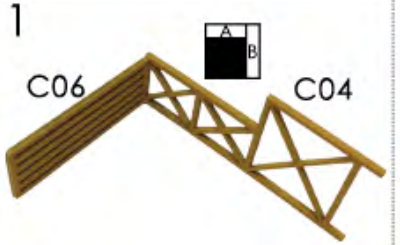

2



3

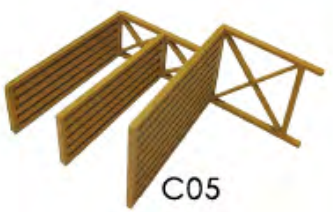


4



C05

5

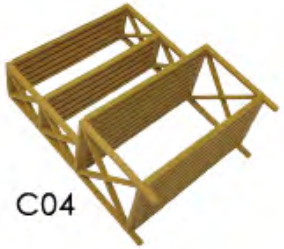


C04

6



7

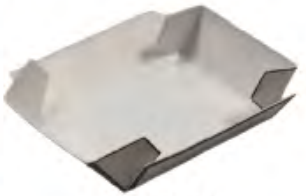

A07-10

8



9 F03



10



A07-19

11



12



13



14 A07-18



Refer to A07-19 production method

15



16



A07-12

17



Bonding at both ends

18 A07-12-1

A07-12-2



19




2 pieces need to be made

20 F03




21 Please remove A08-17 for use before production

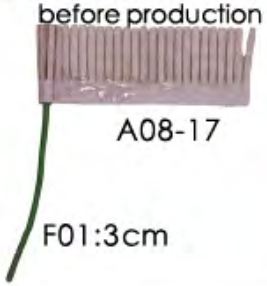

A08-17

F01:3cm

22



(roll up)

23



Spread the tassel

3 pieces need to be completed

24 Please deduct A08-28 for use before production



Refer to A08-17 production method to complete.

25 Please remove A08-29 for use before production



Refer to A08-17 production method to complete.

26




Please deduct a portion of A08-1 for use before production



1



2

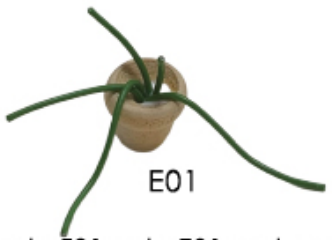


Paste F01 onto E01 as shown in the figure and bend the shape freely

3




Paste A08-1 randomly on F01 (Note: The remaining A08-1 is reserved for future use)

Please remove A08-8, A08-39, A08-40, and A08-43 for use before production

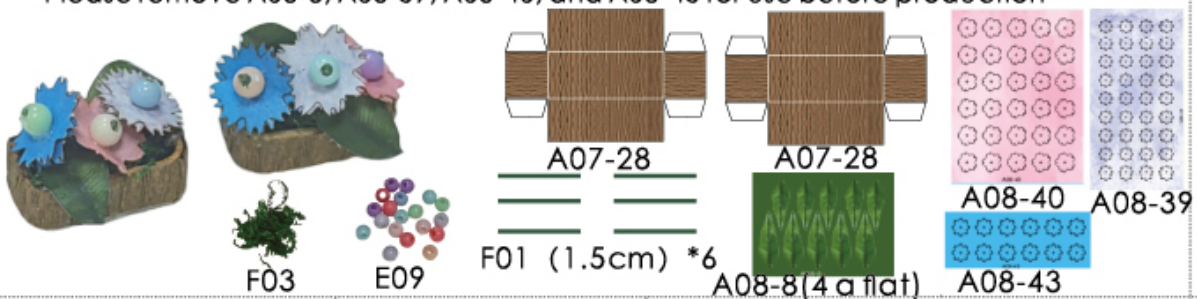

1

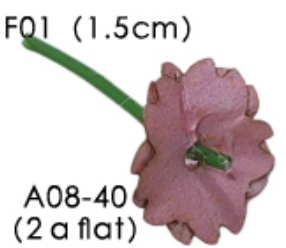

2



3




Refer to A08-40 production method to complete.

4



5

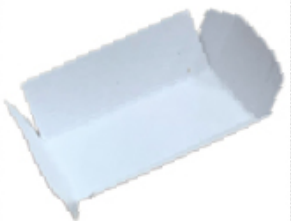



6



7



2 pots need to be made



1




2



3





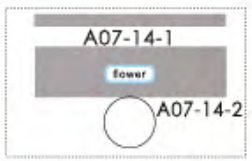

A07-14



F03

F01:2.5cm

F01:2cm

F01:2cm


F01:1.5cm

F01:1.5cm



A08-15

1

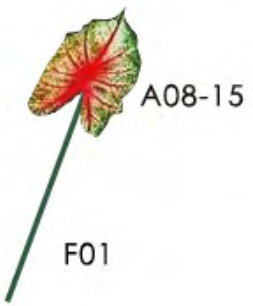

F01

2



3



A07-14-2

4

A07-14-1



5



6

F03



7




8




Flower holder 3




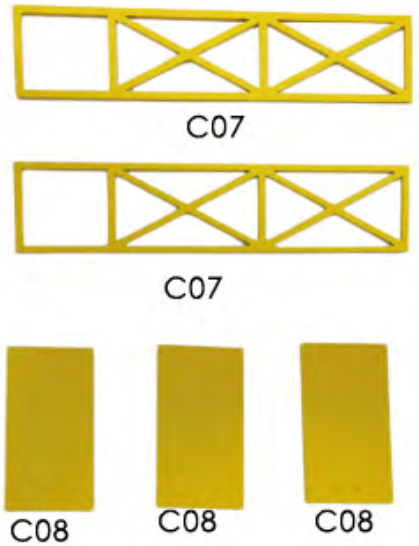

1

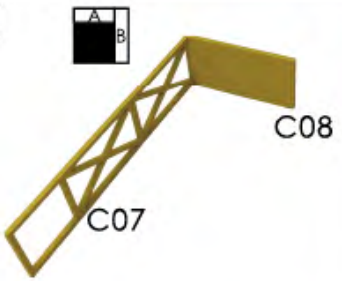

2

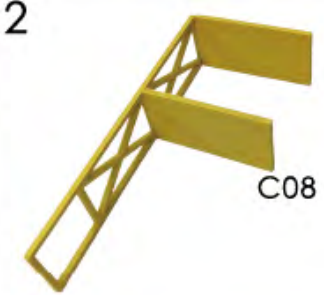

3



4




5




Please remove A08-8 and A08-38 for use before production



1

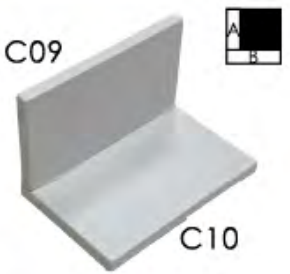

2

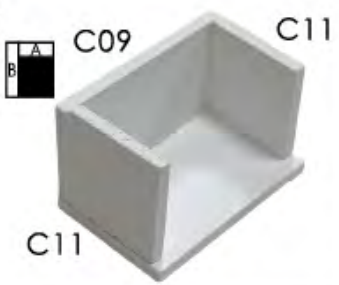

3



4




5 F03




6 A08-8



7

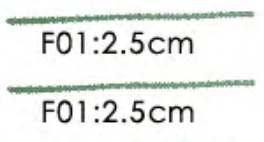

8 E09

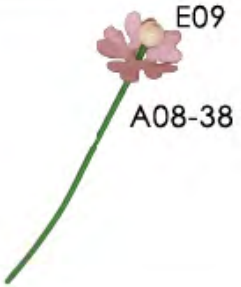

9



10




Please deduct A08-31 for use before production

11



12

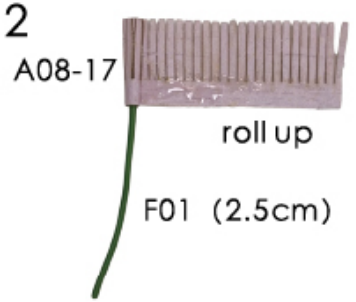

13



14



Refer to A08-17 production method to complete.

15



Refer to A08-17 production method to complete.

16



17



18



23




19




Refer to A08-17 production method to complete.

20

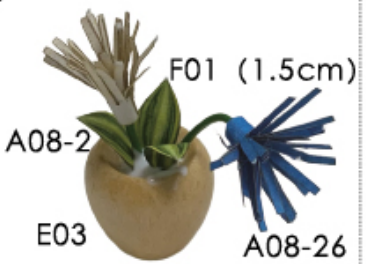

Plant



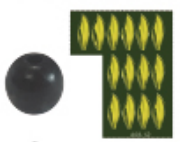

F01 (3cm)
F01 (3cm)
F01 (3cm)

1



Two F01 intertwined with each other

2



Please remove A08-12 for use before production

3




4



Table



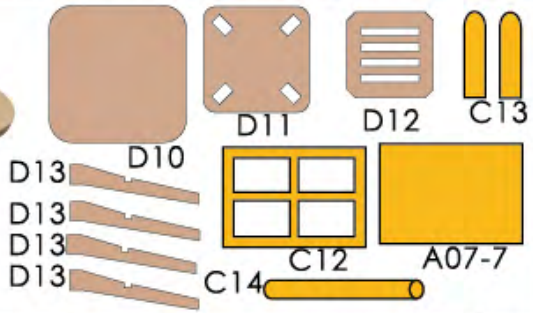

1



2



3




4




5



6

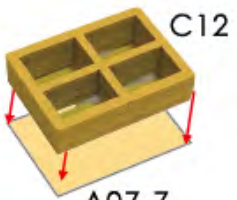

7

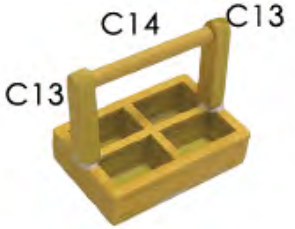

8



Component



1



2




3



4



Please remove A08-4 for use before production

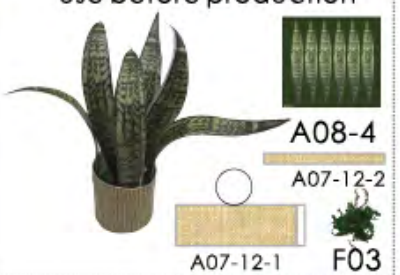

1



2



3





1



A07-3

2




3





1

A07-30

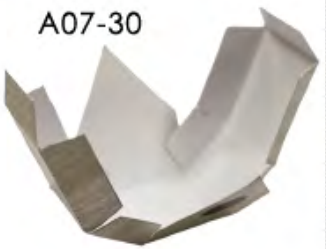

2



3



4

A07-31



5



6



7



8

A07-31





1



A07-2

2



3





D14





A07-6

1



A07-6

2



3


D14



Plants and Flowers 1

Please remove A08-11 for use before production




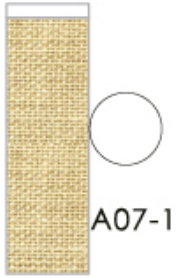

A07-13



F03



A08-11

F01 (3cm)	F01 (3.5cm)
F01 (3cm)	F01 (3.5cm)
F01 (3cm)	F01 (3.5cm)
F01 (3cm)	F01 (4cm)
F01 (3cm)	F01 (4cm)
F01 (3cm)	F01 (4cm)

1



A07-13

2




3

F03




4

A08-11

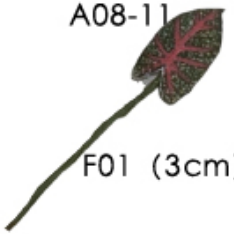

F01 (3cm)

5

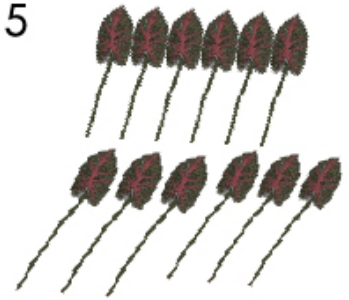

6



Please remove A08-32 and A08-35 for use before production





A08-35



E07




A08-32

F01 (1.5cm)

F01 (2cm)

F01 (2.5cm)

1

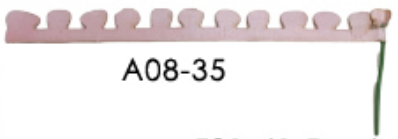

A08-35

F01 (1.5cm)

2



3



F01 (2cm)

F01 (2.5cm)

4



E07


5




A08-32

Please remove A08-16 for use before production




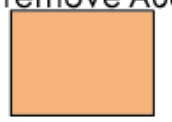

B12



B13

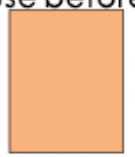


A07-16




F03




B12



B13



F01 (5cm) *6

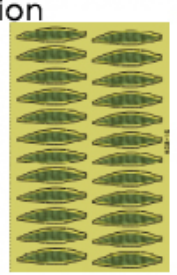

A08-16

1

A08-16



F01 (5cm)

2




Remain A08-16 Stay for use later

3



Planter

4

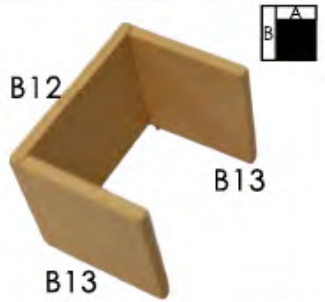

5



6



7



8



Please remove A08-39, A08-40, A08-42, and A08-16 for use before production












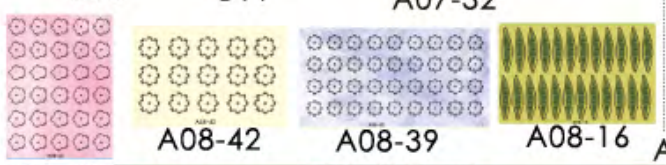


1



2




3

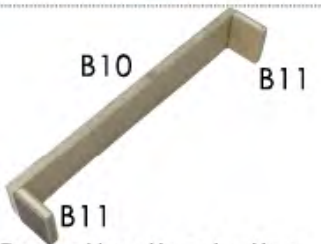

Pay attention to the printing paper with one side facing outward

4

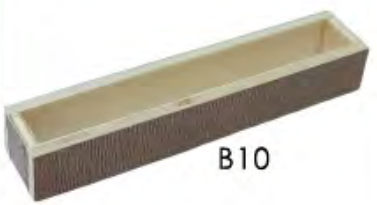

5



(bottom)

6




7





8

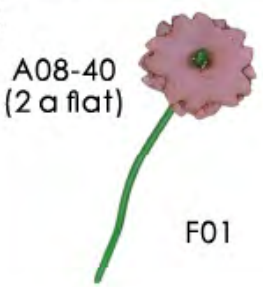

9



10



Mix and match A08-39, A08-40, and A08-42 with the same production method

11




2 pieces need to be made

Plants and Flowers 2

Before production, please remove A08-21, A08-22, and A08-9, and cut F06 according to the A07-34 template for use.



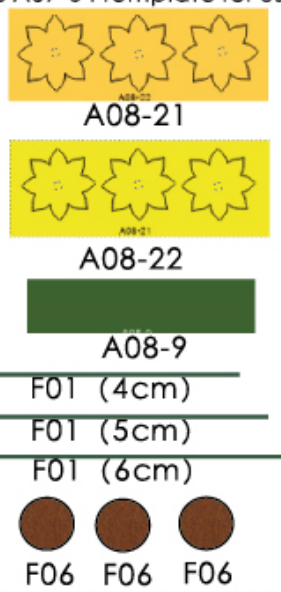

E04

1



2



3



4




5



6




Please deduct A08-10 for use before production

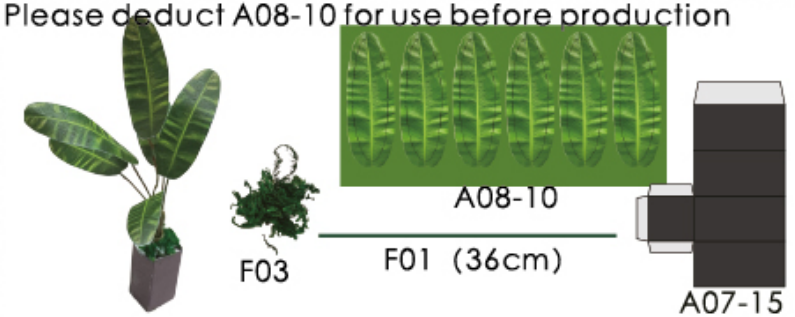

1



2

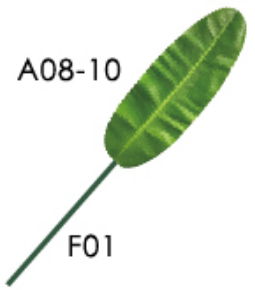

3




4



5



Please remove A08-14 for use before production

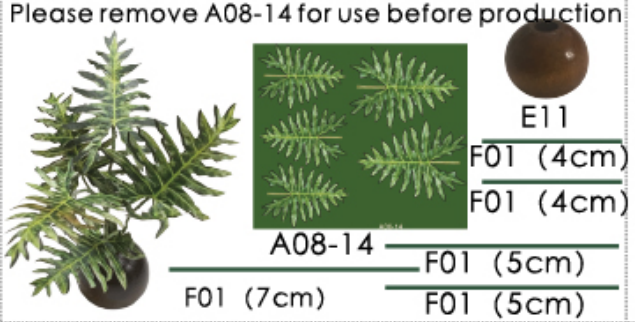

1



2



Please deduct A08-3 for use before production





E05

F01 (3cm)

F01 (3cm)

F01 (3cm)



A08-3

F01 (2.5cm)

F01 (2.5cm)

F01 (2.5cm)



F01 (2.5cm)

1



A08-3

F01

2



3



E05


Please remove A08-7, A08-19, and A08-20 for use before production





E04

F01 (2.5cm) *4

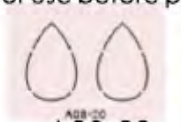

A08-20



A08-19



A08-7



E09

1



E09

F01

2



A08-19

3



A08-19

A08-20

5



A08-7

A08-7

6



E04





A08-13



E11

F01 (3cm)

F01 (4cm)

F01 (4cm)

F01 (5cm)

F01 (5cm)

F01 (5cm)

F01 (6cm)



A08-13

F01



E11

Broom



D15

F04



F05

1

F05(3cm)



Cut F05 into 8 sections
3cm long

2

D15

5cm



F05(3cm)

As shown in the figure, F05
is adhered to the surface of D15

3



F04
Twine

Assembly The Frame

1




2



D02 refers to the line pasting on A03 printing paper

3

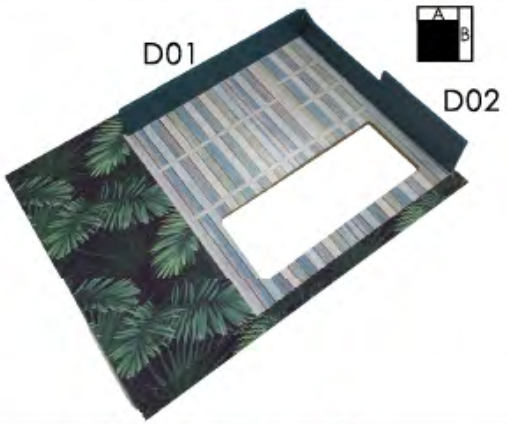

4




5



6




7

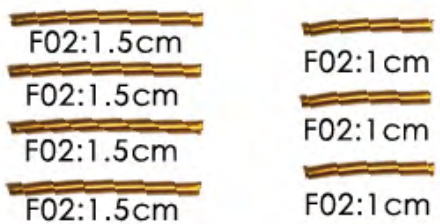

8



9

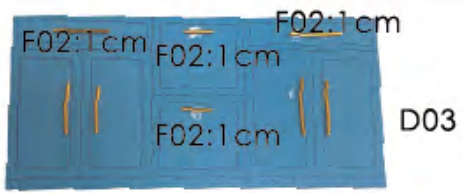

10



11



12



13




14




A02
(Front)

15

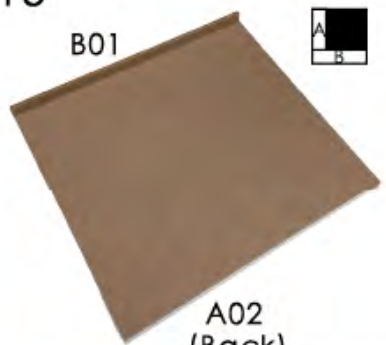

16

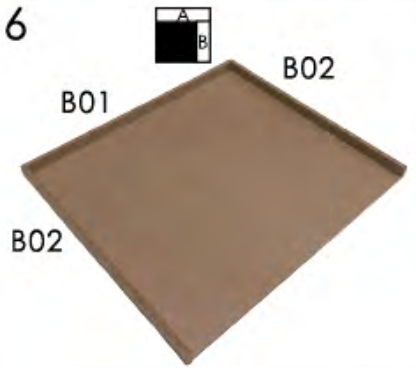


17



(Front)

18

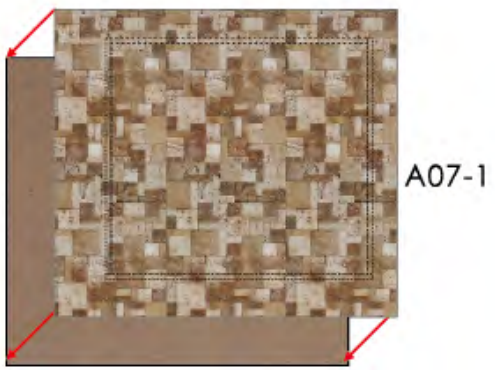


19




Fix the components made of A02 within the reference line on A01

20

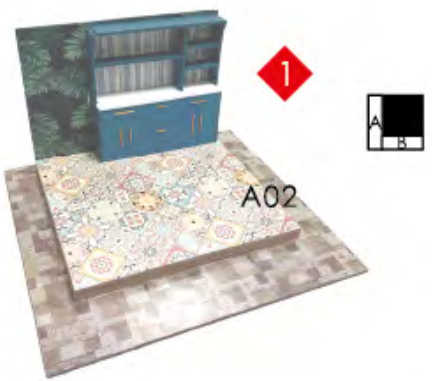


21

Before production, please cut A06 according to A06-2 on template paper A09 and use A10-3 on A10

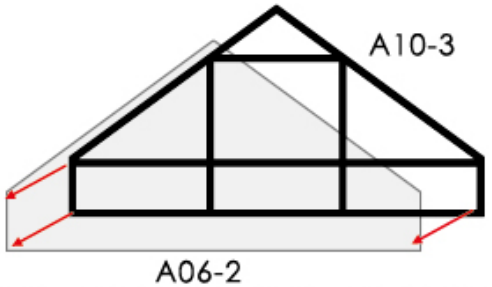


22

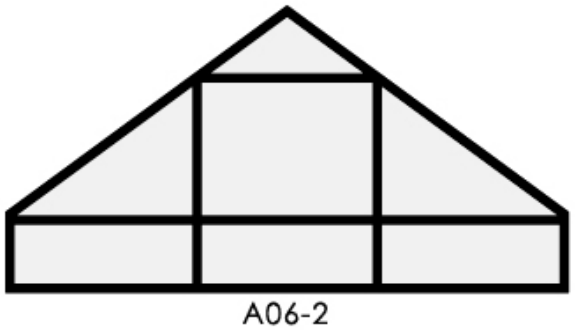


23


Before production, please cut A06 according to A06-1 on template paper A09 and use A10-5 on A10

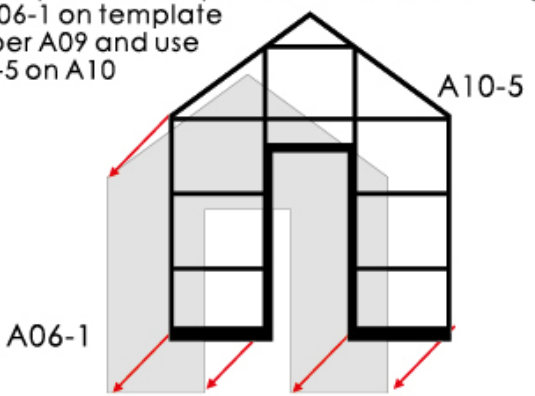


24

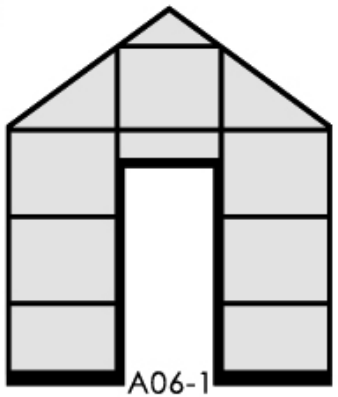


25

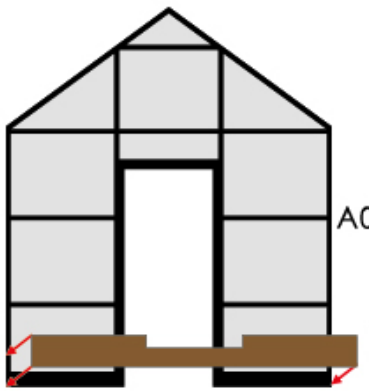

26

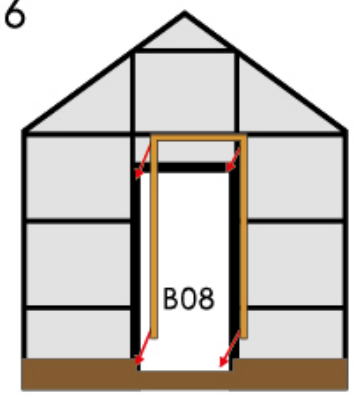

27

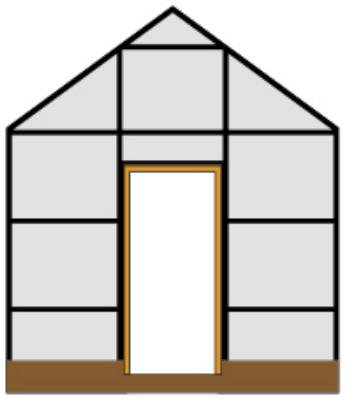

28



29




30



31



32

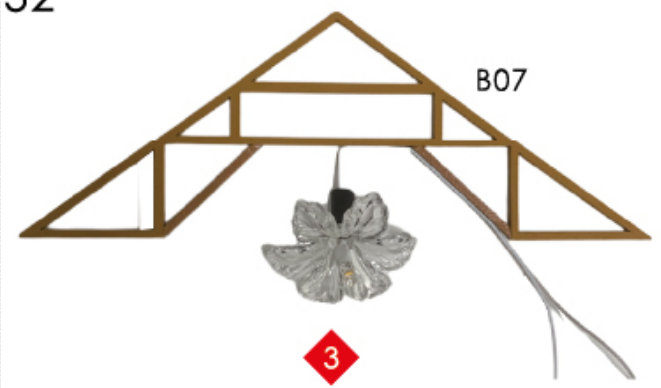


33



Before production, peel off the paper on the surface of A04 and A05 before use

34

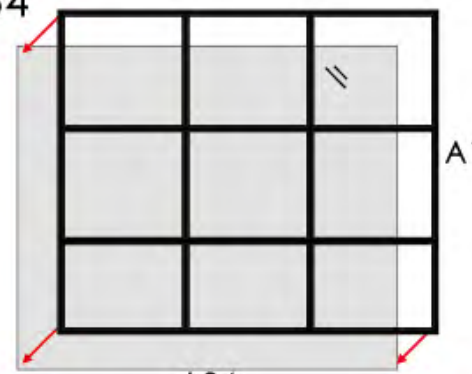


35




A04
(2 pieces required)

35

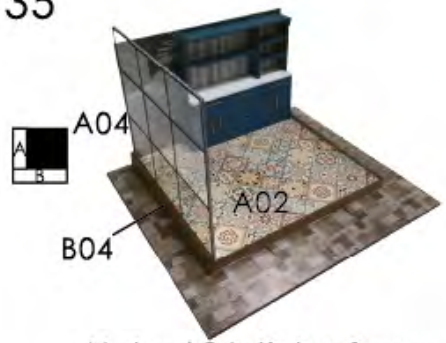


Note: A04 sticker faces outward on one side

36

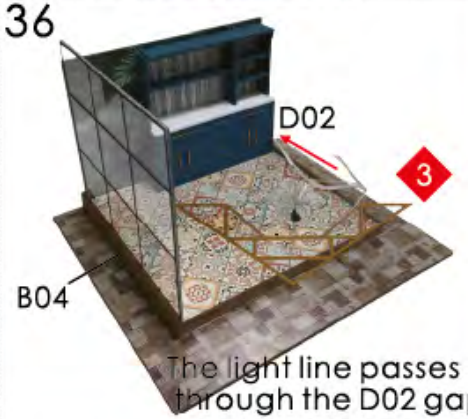

The light line passes through the D02 gap

37

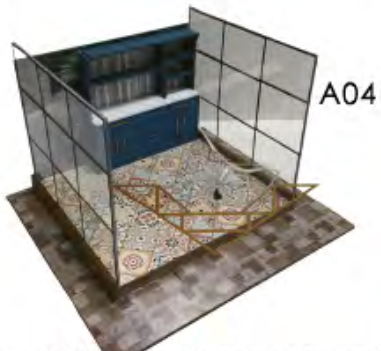


Note: A04 sticker faces outward on one side

38




39

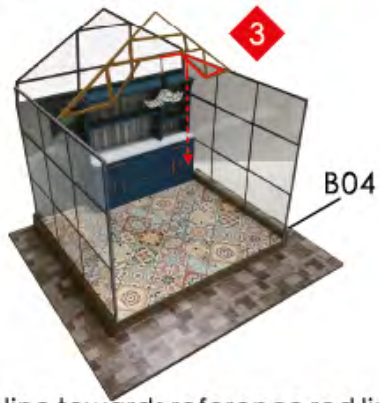

Light line towards reference red line

40

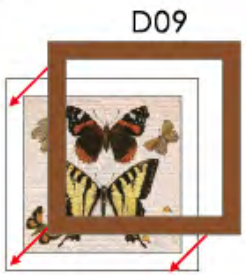


A07-20

41



D09

42

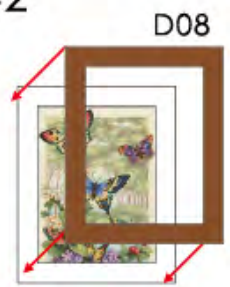

A07-21

43



D08

44



Organ fold

45



46



Place the components on the cabinet as shown in the picture

47



48



49



50




51




52



53

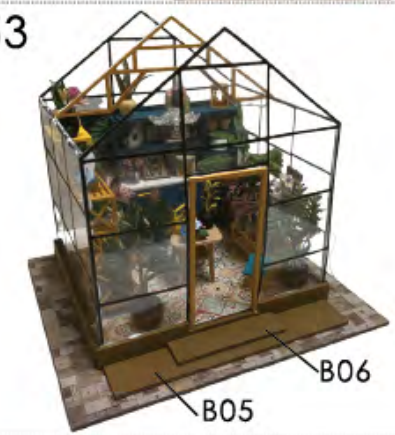

54 Before production, please cut A06 according to A06-3 on template paper A09 and use it

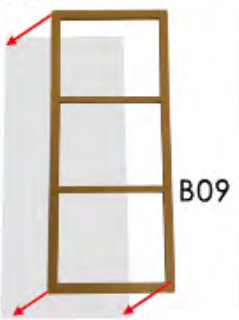

55




56



57




58

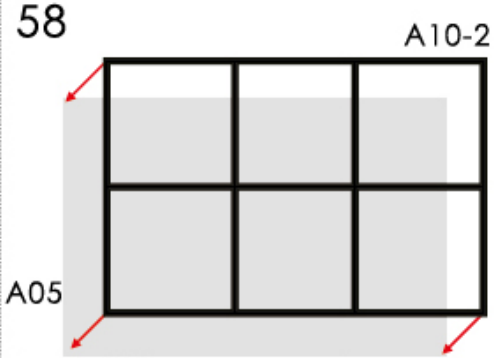

Tear off the paper on the surface of A05 before use before production

59

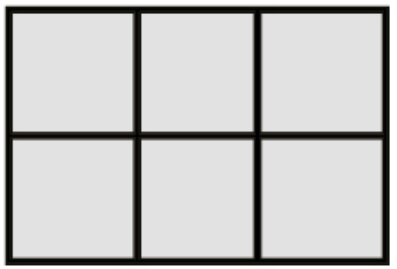


A05
(2 pieces required)

60




Fold in half

61

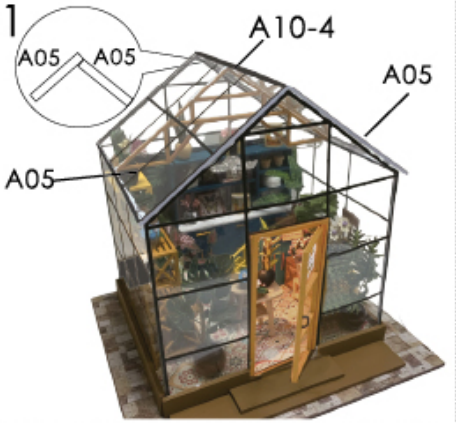

62

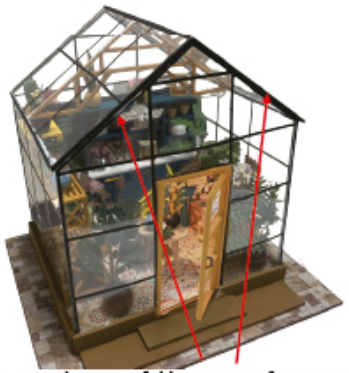

The edge of the roof needs to be black with a marker pen.

63



A08-33 roll up

64



A08-33 A08-34


A08-34 Same production method

65



Paste A08-1 randomly on F01 to create climbing vine plants

66

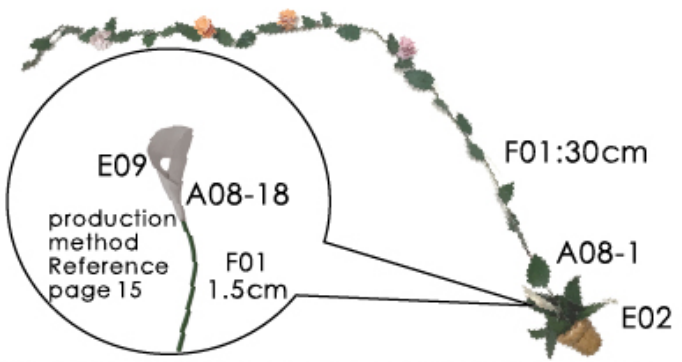

The production method is the same as above

67



Fix the climbing plants on the house as shown in the picture

68



69



70




How to assemble the battery holder

Statement: the lamp wires cannot be inserted into the output socket.

- – Can use 2*AAA batteries
- – Please notice the place of anode and cathode when pit in the batteries
- – Rechargeable batteries are not blunt electricity
- – Rechargeable batteries can only be charged under adult supervision
- – Rechargeable batteries should be removed from the toy before charging
- – Different types of batteries cannot mix; Do not mix new batteries in use with semi-used batteries.
- – Run out of battery should be removed from the toy
- – The power shall not be short circuit

1

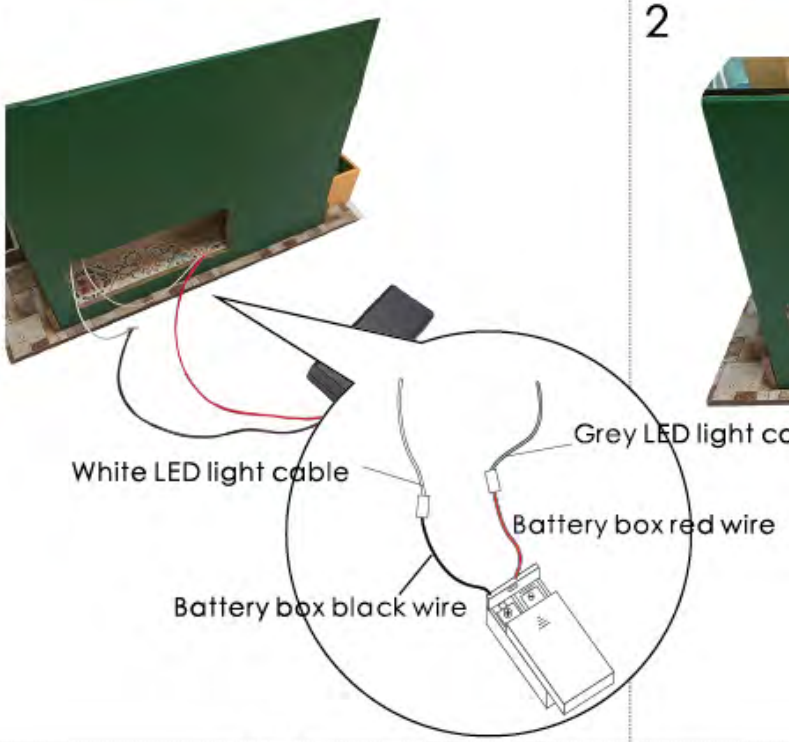

2



After the assembly is completed, the manual should be retained